




НАСТРОЙКА МОДЕМА ACORP LAN 110/410 В РЕЖИМ ROUTER

1. "Пуск" → "Настройка" → "Панель управления" → "Сетевые подключения", либо "Start" → "Settings" → "Control Panel" → "Network Connections" (ОС Windows XP).
Для того чтобы подключиться к модему необходимо в свойствах сетевого подключения сделать следующие настройки:
 - IP-адрес: 192.168.1.2
 - Маска подсети: 255.255.255.0

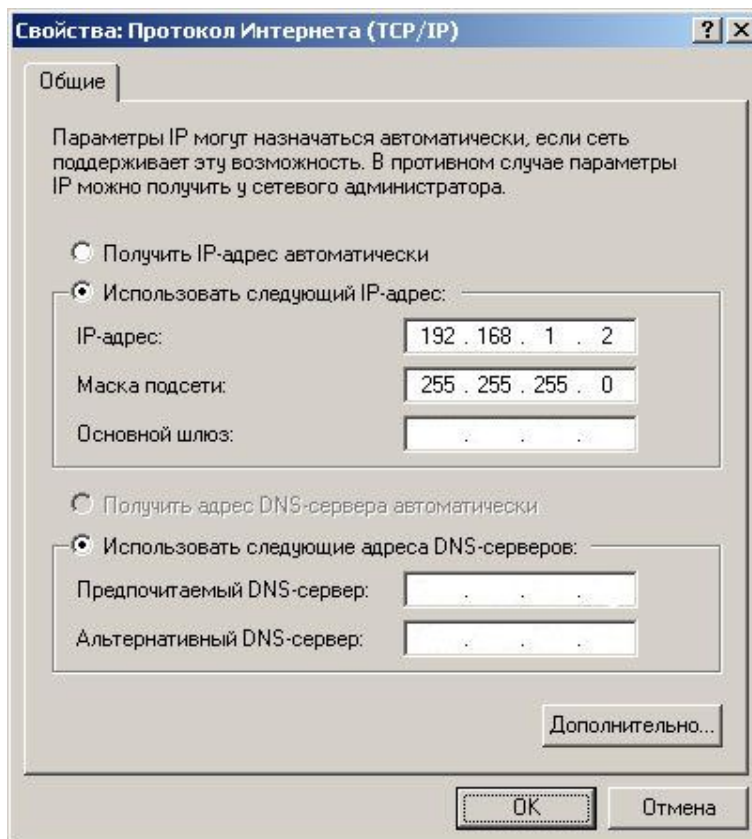

2. Убедитесь, что модем правильно подключен к компьютеру. Откройте любой браузер и в адресной строке браузера наберите адрес 192.168.1.1 Появится страница, предлагающая ввести логин и пароль. По умолчанию логин на доступ к веб-интерфейсу: "Admin", пароль также "Admin".





3. Загрузится веб-интерфейс настройки модема.

ACORP **ADSL Router**

ADSL Router Status

This page shows the current status and some basic settings of the device.

System	
Product Name	Acorp Sprinter@ADSL LAN110
Uptime	13:17
Firmware Version	1.08.RU.19032009
DSP Version	2.9.0.1
Name Servers	
Default Gateway	

DSL	
Operational Status	ADSL2+ AnnexM, SHOWTIME.L0(Interleave)
Upstream Speed	1942 kbps
Downstream Speed	8191 kbps

LAN Configuration	
IP Address	192.168.1.1
Subnet Mask	255.255.255.0
DHCP Server	Disabled
MAC Address	001ee

WAN Configuration						
Interface	VPI/VCI	Encap	Protocol	IP Address	Gateway	Status
ppp0	8/35	LLC	PPPoE			up 13:17:17 / 13:17:17 <input type="button" value="Disconnect"/>



4. Слева выберите пункт WAN и подпункт Channel Config. Поставьте точку в таблице Current ATM VC Table (в нижней части картинки). В поле Channel Mode выберите PPPoE, в полях VPI 8 и VCI 35. В полях User Name и Password необходимо ввести ваше входное имя и входной пароль. По окончании нажмите кнопку Modify.

ACORP **ADSL Router**

WAN Configuration

This page is used to configure the parameters for the channel operation modes of your ADSL Modem/Router.

Channel Mode: PPPoE **Admin Status:** Enable Disable

VPI: 8 **Enable NAPT:**

VCI: 35

Encapsulation: LLC VC-Mux

PPP Settings:

User Name: guest@mtu

Password: ●●●●●●

Type: Continuous

Idle Time (min):

WAN IP Settings:

Type: Fixed IP DHCP

Local IP Address:

Remote IP Address:

Subnet Mask:

Unnumbered:

Default Route: Disable Enable

Current ATM VC Table:

Select	Inf	Mode	VPI	VCI	IP Addr	User Name	DRoute	Status	Actions
<input checked="" type="radio"/>	ppp0	PPPoE	8	35			On	Enable	



- Для сохранения настроек перейдите к пункту Admin Commit/Reboot и нажмите кнопку Commit/Reboot:

The screenshot displays the web interface of an ACORP ADSL Router. On the left, a navigation menu titled "Site contents:" lists various system pages, with "Admin" expanded to show "Commit/Reboot". The main content area is titled "ADSL Router" and "Commit/Reboot". It contains a descriptive text: "This page is used to commit changes to system memory and reboot your system." Below this text is a single button labeled "Commit and Reboot".